

Level Platform

The threaded rods #3 in the support arms under the platform need to be adjusted to raise Aft edge.

Step 1 -Remove Tender

Step 2-Loosen bolts #1 (x2) located on the sides of each platform bracket (see Page 2)

Danger: DO NOT remove bolt, This could cause the platform to shift causing injury

Step 3- Loosen nut #2 on the end of threaded rod -Back it off at least an Inch (see Page 2)

Note: At this point the platform is supported by Nut #4

Step 4-Raise aft edge of platform by hand or other method into level position


Caution: DO NOT Use # 4 Nut to jack Platform into level position- Damage to Threaded Rod and Nut may occur

Step 5- Once platform is in correct location, Chase nut #4 to that location against slide Pin #5 (see Page 2)

Note: At this point the platform is supported by nut #4

Step 6 -Tighten nuts #1 & #2 to lock platform at this location

Caution: Overtightening nut #2 may Damage threads

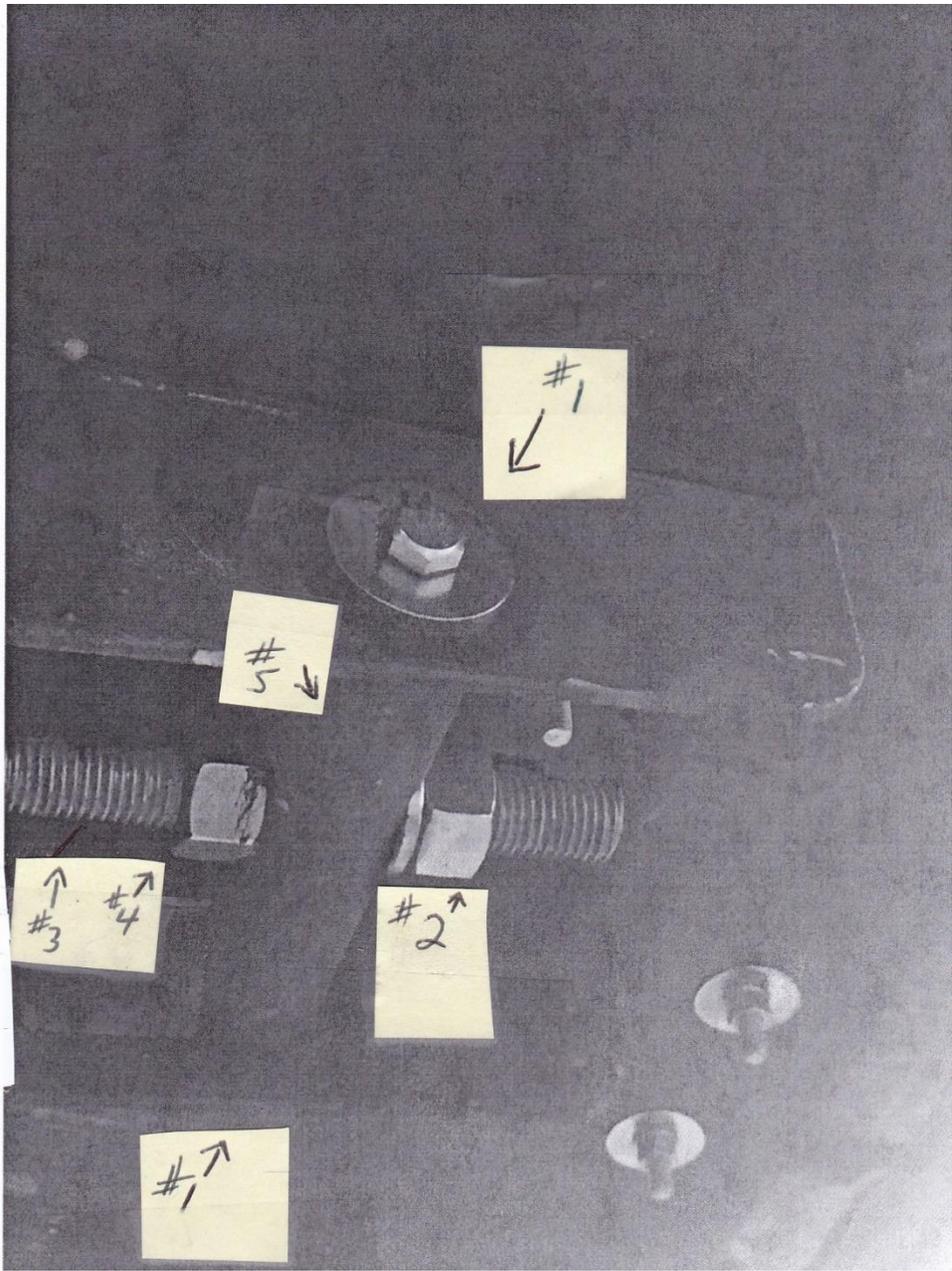

#1
↓

#5
↓

↑ #3
↑ #4

#2
↑

#1
↑